



# **CE62**

## **(VERSION 2.0.0)**

### **PERSONAL PROGRAMMING SYSTEM**

### **REFERENCE MANUAL**

This Personal Programming System is used to program the GX1280S **MATRIX** and GX2360S **QUANTUM** Marine transceivers. With this Programming System, you can quickly and easily program the Standard Horizon GX1280S **MATRIX** and GX2360S **QUANTUM** operating channels from your personal computer.

## **INSTALLING OR REMOVAL OF PROGRAM**

---

### Minimum System Requirements

- ☐ IBM-Compatible PC with Pentium processor.
- ☐ 32 bit Operating system such as Windows 98, Windows XP, or Windows 2000.
- ☐ 3.5-inch Floppy Disk Drive
- ☐ Up to 20 Megabytes of free hard disk drive space
- ☐ Mouse or other pointing device
- ☐ 256-color display adapter (24-bit color recommended) and monitor with 640 x480 resolution or higher.

### **Installing the “Programming Software”**

1. Install the CE62 Programming Software diskette into your computer’s 3.5-inch floppy disk drive.
2. Click the **“Start”** button and select **“Run ...”** then type in the drive letter of your 3.5-inch floppy disk drive followed by “setup” (for example, **“A:\setup”**), and press the [ENTER] key.
3. Followed the directions on your computer screen.

### **To remove the “Programming Software” from your computer**

1. Click the **“Start”** button and select **“Settings,”** then **“Control Panel.”**
2. Select **“Add/Remove Programs”** from the “Control Panel” page.
3. Select **“CE62”** then click **“Add/Remove”** box.

---


## **SELECTING THE MODEL TO BE PROGRAM**

---

The CE62 Personal Programming System enable to programming the Standard Horizon GX1280S **MA-TRIX** and GX2360S **QUANTUM**. At the beginning, select the transceiver to be programmed via the **“Edit”** menu.

Click the **“Edit”** menu and select **“Model,”** then click the left mouse button on the desired model name which you wish to program.

The model name indicats at the right bottom of the Main Screen.

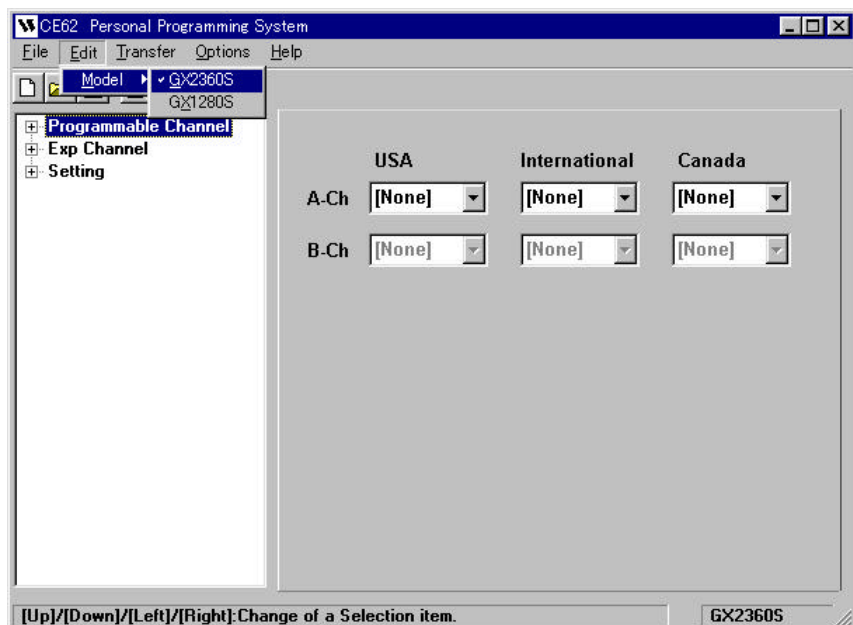

## MAIN SCREEN

The CE62 Personal Programming System consists of two major sections: the “**CHANNEL LIST TABLE**” (right side) and the “**CHANNEL TREE VIEW**” (left side).

The “**CHANNEL LIST TABLE**” consists of three categories: the “*Programmable Channel*,” “*Exp Channel*,” and “*Setting*.”

### Programmable Channel Table


When select the GX2360S programming mode, you may programming the Channel A/B Preset channel in this screen.

#### **A-CH:** *Channel A Preset Channel*

This parameter sets the channel for the “Channel A” Preset Channel independently of “**USA**,” “**International**,” and “**Canada**” modes.

#### **B-CH:** *Channel B Preset Channel*

This parameter sets the channel for the “Channel B” Preset Channel independently of “**USA**,” “**International**,” and “**Canada**” modes.

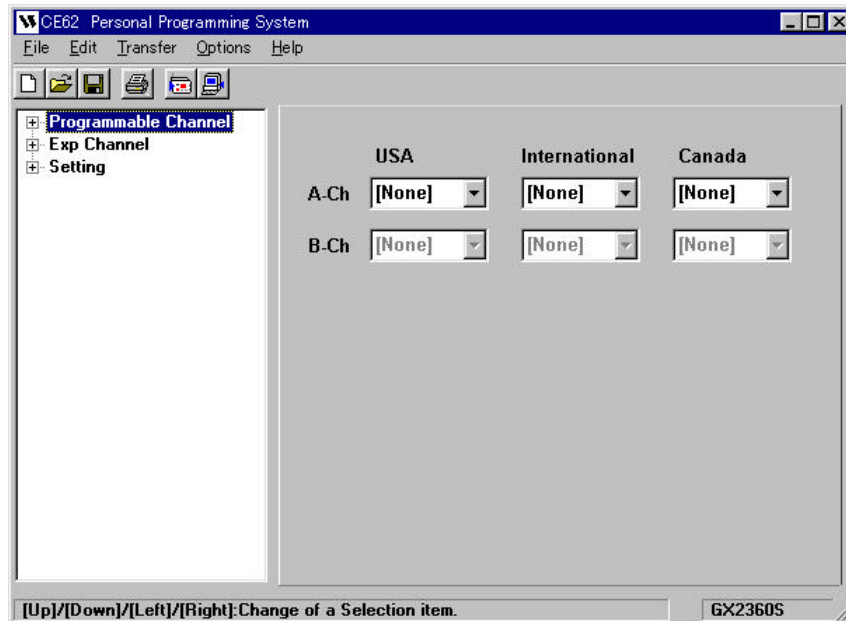

## CHANNEL LIST TABLE

### Programmable Channel List Table

Double click the left mouse button on the “**Programmable Channel**” selection in the left window of the screen to display its lower folder (“**USA**,” “**International**,” “**Canada**,” and “**WX Channel**”), then click the left mouse button on the desired to channel mode display the “**Program Channel List Table**” for each channel mode. Alternatively, click the left mouse button on the “**Exp Channel**” selection in the left window to display the “**Expansion Channel List Table**,” click the left mouse button on the “**Setting**” selection in the left window to display the “**Setup Table**.”

#### CH: Channel Number

This indicates the operating channel number.

#### ENABLE: Enable/Disable the Channel


This indicates whether the channel is “*Enabled* ([Enable])” or “*Disabled* (blank)” for operation.

#### RX [MHz]: Receive frequency

This indicates the Receive frequency of the channel.

#### TX [MHz]: Transmit frequency

This indicates the Transmit frequency of the channel. If the “**Tx INHIBIT**” feature has been engaged on this channel, this field will show “---.---” to indicate that transmission is not possible. See also following section.

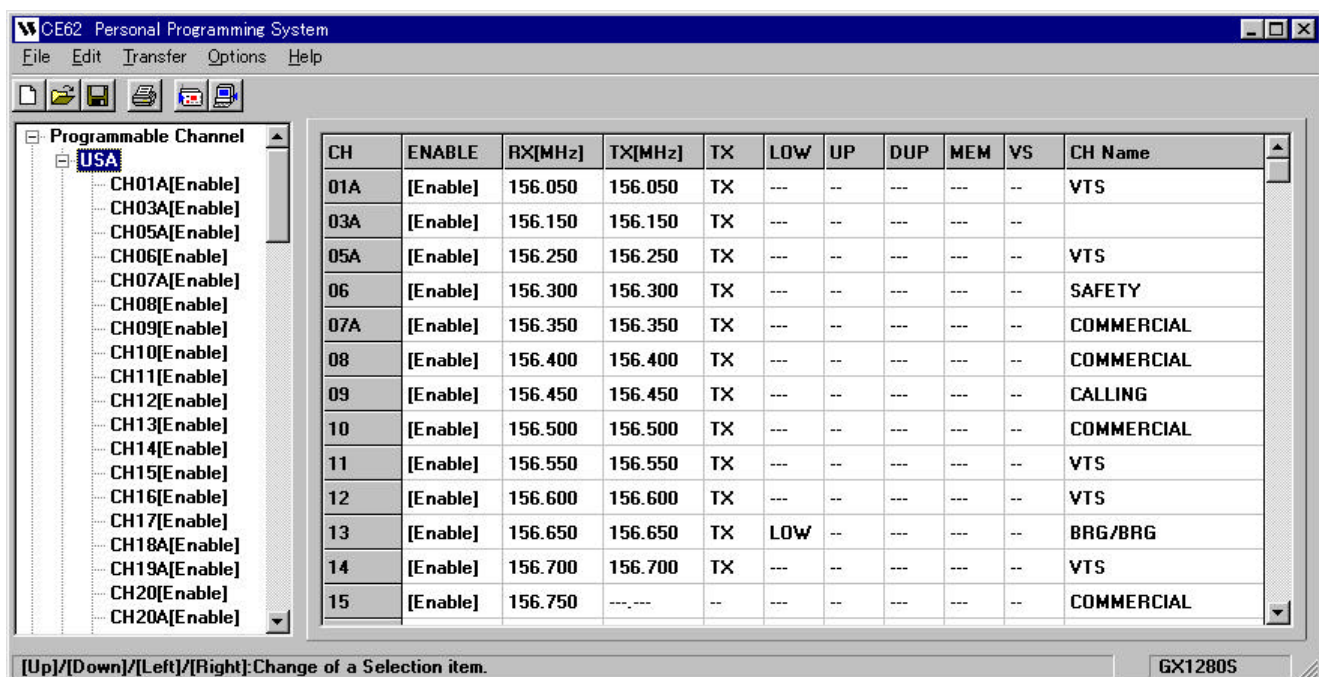

| CH  | ENABLE   | RX[MHz] | TX[MHz] | TX  | LOW | UP  | DUP | MEM | VS  | CH Name    |
|-----|----------|---------|---------|-----|-----|-----|-----|-----|-----|------------|
| 01A | [Enable] | 156.050 | 156.050 | TX  | --- | --- | --- | --- | --- | VTS        |
| 03A | [Enable] | 156.150 | 156.150 | TX  | --- | --- | --- | --- | --- |            |
| 05A | [Enable] | 156.250 | 156.250 | TX  | --- | --- | --- | --- | --- | VTS        |
| 06  | [Enable] | 156.300 | 156.300 | TX  | --- | --- | --- | --- | --- | SAFETY     |
| 07A | [Enable] | 156.350 | 156.350 | TX  | --- | --- | --- | --- | --- | COMMERCIAL |
| 08  | [Enable] | 156.400 | 156.400 | TX  | --- | --- | --- | --- | --- | COMMERCIAL |
| 09  | [Enable] | 156.450 | 156.450 | TX  | --- | --- | --- | --- | --- | CALLING    |
| 10  | [Enable] | 156.500 | 156.500 | TX  | --- | --- | --- | --- | --- | COMMERCIAL |
| 11  | [Enable] | 156.550 | 156.550 | TX  | --- | --- | --- | --- | --- | VTS        |
| 12  | [Enable] | 156.600 | 156.600 | TX  | --- | --- | --- | --- | --- | VTS        |
| 13  | [Enable] | 156.650 | 156.650 | TX  | LOW | --- | --- | --- | --- | BRG/BRG    |
| 14  | [Enable] | 156.700 | 156.700 | TX  | --- | --- | --- | --- | --- | VTS        |
| 15  | [Enable] | 156.750 | ---     | --- | --- | --- | --- | --- | --- | COMMERCIAL |

---

## **CHANNEL LIST TABLE**

---

**TX:** *Enable/Disable the Transmit*

This indicates whether the transmitter is “*Enabled (TX)*” or “*Disabled (--)*.” See also previous section; remember that if “*Disabled (--)*” is engaged, the transmitter is disabled.

**LOW:** *Transmitter Power Output*

This indicates the transmitter’s power output. Default values are programmed into each channel, according to international standard.

**UP:** *Transmit Power Selection*

This indicates whether the transmit power selection is “*Enabled (UP)*” or “*Disabled (--)*.”

**DUP:** *Duplex Operation*

This indicates whether the duplex operation (separate transmit/receive frequencies) is Enabled “*Enabled (DUP)*” or “*Disabled (---)*.”

**MEM:** *Memory Channel Scan*

This indicates whether the memory scanning (M-SCAN) is “*Enabled (MEM)*” or “*Disabled (--)*.”

**VS:** *Voice Scrambler*

This indicates whether the Voice Scrambler is “*Enabled (VS)*” or “*Disabled (--)*.”

**CH Name:** *Alpha/Numeric “Tag”*

This indicates the Alpha/Numeric “Tag” used identify the channel.

## CHANNEL LIST TABLE

### Expansion Channel List Table

**CH:** *Channel Number*

This number is used to identify the channel. The channel numbers occur in sequence, and their order cannot be changed.

**ENABLE:** *Enable/Disable the Channel*

This indicates whether the channel is “*Enabled ([Enable])*” or “*Disabled (blank)*” for operation.

**POS:** *Operating channel Number*

This indicates the operating channel number. The channel list for the Expansion channel is shown on page ??.

**RX [MHz]:** *Receive frequency*

This indicates the Receive frequency of the channel.

**TX [MHz]:** *Transmit frequency*

This indicates the Transmit frequency of the channel. If the “**TX INHIBIT**” feature has been engaged on this channel, this field will show “---.---” to indicate that transmission is not possible. See also following section.

**TX:** *Enable/Disable the Transmit*

This indicates whether the transmitter is “*Enabled (TX)*” or “*Disabled (--)*.” See also previous section; remember that if “*Disabled (--)*” is engaged, the transmitter is disabled.

| CH | ENABLE | POS | RX[MHz] | TX[MHz] | TX | LOW | UP | DUP | MEM | VS | CH Name |
|----|--------|-----|---------|---------|----|-----|----|-----|-----|----|---------|
| 1  |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 2  |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 3  |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 4  |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 5  |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 6  |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 7  |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 8  |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 9  |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 10 |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 11 |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 12 |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |
| 13 |        | 0   | 156.000 | 156.000 | -- | LOW | -- | --- | --- | -- |         |

---

## **CHANNEL LIST TABLE**

---

**LOW:** *Transmitter Power Output*

This indicates the transmitter's power output. Default values are programmed into each channel, according to international standard.

**UP:** *Transmit Power Selection*

This indicates whether the transmit power selection is "*Enabled (UP)*" or "*Disabled (--)*."

**DUP:** *Duplex Operation*

This indicates whether the duplex operation (separate transmit/receive frequencies) is "*Enabled (DUP)*" or "*Disabled (---)*."

**MEM:** *Memory Channel Scan*

This indicates whether the memory scanning (M-SCAN) is "*Enabled (MEM)*" or "*Disabled (---)*."

**VS:** *Voice Scrambler*

This indicates whether the Voice Scrambler is "*Enabled (VS)*" or "*Disabled (--)*."

**CH Name:** *Alpha/Numeric "Tag"*

This indicates the Alpha/Numeric "Tag" used identify the channel.

## CHANNEL LIST TABLE

### WX Channel List Table

**Enable:** *Enable/Disable the Channel*

This parameter toggles whether the channel is “Enabled (☒)” or “Disabled (☐)” for operation.


**Scan:** *Enable/Disable the Scanning feature*

This parameter toggles whether the channel is “Enabled (☒)” or “Disabled (☐)” for operation.

**CH Name:** *Alpha/Numeric “Tag”*

Enter the 12 character Alpha/Numeric “Tag” used identify the WX channel.

To enter the Alpha/Numeric Tag, click the left mouse button on this parameter to enable programming, then type the characters of the desired Alpha/Numeric Tag, then press the [ENTER] key to save the programmed “Tag.”

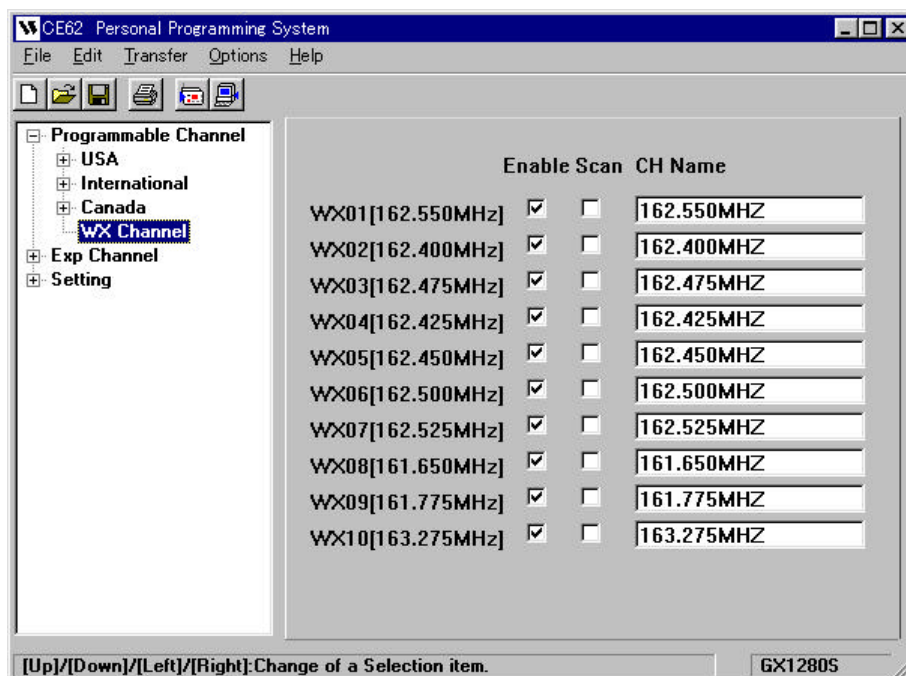

## PROGRAMMING CHANNEL WINDOW

This section displays the channel list, and allows selection of the channel on which you wish to make changes to the configuration of the channel data.

Double click the *left* mouse button on the each items (“USA,” “International,” “Canada,” and “**Exp Channel**”) to display its lower folder.

On the lower folder in the left column, click the *left* mouse button on any channel to open its programming window, so you can program or modify the channel data on that channel.

### Programmable Channel Window

**Channel Number:** *Channel Number*


This indicates the operating channel number.

**Rx Frequency:** *Receive frequency*

This indicates the Receive frequency of the channel.

**Tx Frequency:** *Transmit frequency*

This indicates the Transmit frequency of the channel. If the “**Tx Inhibit**” feature has been engaged on this channel, this field will show “---.---” to indicate that transmission is not possible.

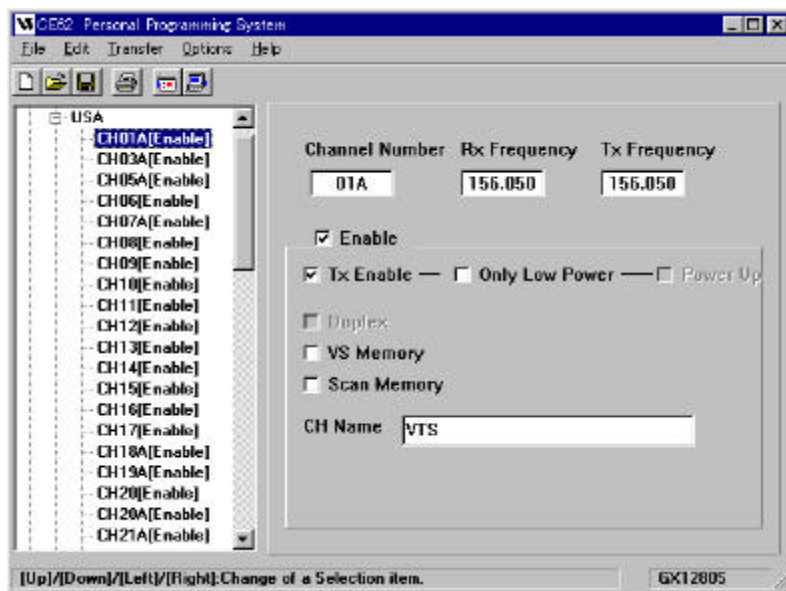

**Enable:** *Enable/Disable the Channel*

This parameter toggles the channel status between “Enabled (☒)” or “Disabled (☐)” for operation.

**Tx Enable:** *Enable/Disable the Transmit*

This parameter can not be edited.

Indicates the transmitter “Enabled (☒)” or “Disabled (☐)” for operation.

**Only Low Power:** *Transmitter Power Output*

This parameter can not be edited.

Indicates the transmitter’s power output, on this channel only, between “HI (☐)” or “Low (☒)”. This parameter is ignored when the “**Tx Enable**” parameter is set to “Off (☐)”.

---

## **PROGRAMMING CHANNEL WINDOW**

---

### **Power Up:** *Transmit Power Selection*

This parameter can not be edited.

Indicates the transmit power selection shall be “*Enabled* (☒)” or “*Disabled* (☐)”. This parameter is ignored when the “Only Low Power” parameter is set to “*Low* (☒)”.

### **Duplex:** *Duplex Operation*

This parameter can not be edited.

Indicates the duplex operation (separate transmit/receive frequencies) is “*Enabled* (☒)” or “*Disabled* (☐)”.

### **VS Memory:** *Voice Scrambler*

This parameter toggles the Voice Scrambler “*Enabled* (☒)” or “*Disabled* (☐)”.

### **Scan Memory:** *Memory Channel Scan*

This parameter toggles the memory scanning (M-SCAN) “*Enabled* (☒)” or “*Disabled* (☐)”.

### **CH Name:** *Alpha/Numeric “Tag”*

Enter the 12 character Alpha/Numeric “Tag” used identify the channel.

To enter the Alpha/Numeric Tag, click the left mouse button on this parameter to enable programming, then type the characters of the desired Alpha/Numeric Tag, then press the [ENTER] key to save the programmed “Tag.”

## PRGRAMMING CHANNEL WINDOW

### Expansion Channel Window

#### Position: *Frequency List*


This parameter selects the operating frequency for this channel. Select the desired frequency from the drop down list. The channel list for the Expansion channels is shown on page 20.

#### Rx Frequency: *Receive frequency*

This indicates the Receive frequency of the channel.

#### Tx Frequency: *Transmit frequency*

This indicates the Transmit frequency of the channel. If the “**TX INHIBIT**” feature has been engaged on this channel, this field will show “---.---” to indicate that transmission is not possible.

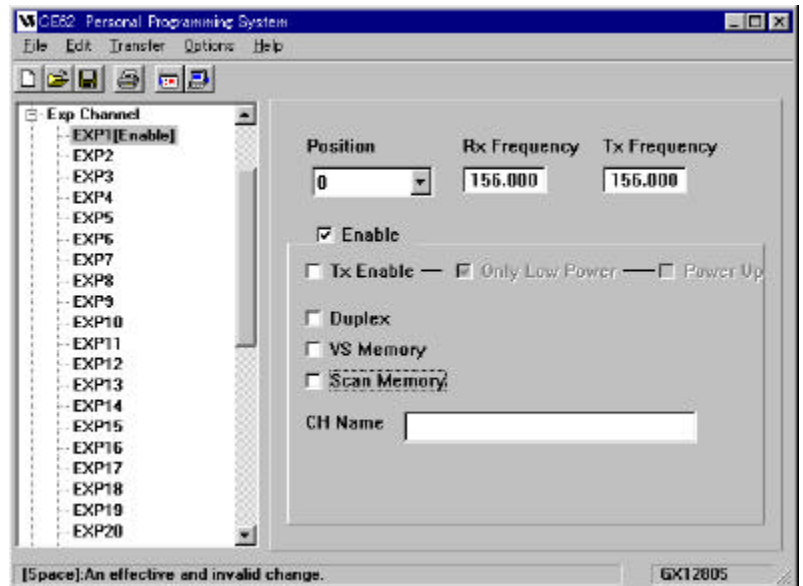

#### Enable: *Enable/Disable the Channel*

This parameter toggles the channel status between “Enabled (☒)” or “Disabled (☐)” for operation.

#### TX Enable: *Enable/Disable the Transmit*

This parameter toggles the transmitter “On (☒)” or “Off (☐)” for operation.

#### Only Low Power: *Transmitter Power Output*

This parameter toggles the transmitter’s power output, on this channel only, between “HI (☐)” or “Low (☒)”. This parameter is ignored when the “**TX ENABLE**” parameter is set to “Off (☐)”.

#### Power Up: *Transmit Power Selection*

This parameter toggles the transmit power selection is “Enabled (☒)” or “Disabled (☐)”. This parameter is ignored when the “Only Low Power”e parameter is set to “Low (☒)”.

#### Duplex: *Duplex Operation*

This parameter toggles the duplex operation (separate transmit/receive frequencies) is “Enabled (☒)” or “Disabled (☐)”.

#### VS Memory: *Memory Channel Scan*

This parameter toggles the Voice Scrambler “Enabled (☒)” or “Disabled (☐)”.

---

## **PROGRAMMING CHANNEL WINDOW**

---

**Scan Memory:** *Memory Channel Scan*

This parameter toggles the memory scanning (M-SCAN) “*Enabled* (☒)” or “*Disabled* (☐)”.

**CH Name:** Alpha/Numeric “Tag”

Enter the 12 character Alpha/Numeric “Tag” used identify the channel.

To enter the Alpha/Numeric Tag, click the left mouse button on this parameter to enable programming, then type the characters of the desired Alpha/Numeric Tag, then press the [Enter] key to save the programmed “Tag.”

## SETTING LIST TABLE

This window allows you to set up the configuration of the radio.

### **“Radio Setup” Folder**

#### **Contrast Level:**

This parameter adjust the LCD contrast level. Available selections are “7 (dark)” through “0 (light).”

#### **Dimmer Status:**

This parameter adjust the LCD illumination level. Available selections are “HI,” “MID,” “LO,” and “OFF.”

#### **Offset Time:**

This parameter sets the time difference between local time and UTC (Universal Time Coordinated or GMT Greenwich Mean Time).

#### **Key Beep:**

This parameter toggles the key beeper “On (☒)” or “Off (☐)”.

#### **WX Alert:**

This parameter toggles Weather Alert feature “On (☒)” or “Off (☐)”.

#### **Scan Type:**

This parameter selects the scan mode between the “Memory Scanning (M-SCAN)” and “Priority Scanning (P-SCAN).”

#### **Voice Scrambler:**

This parameter setup the scrambler code. Available selections are “3,” “2,” “1,” “0,” and “OFF.”

#### **True MAG:**

This parameter selects the GPS COG (Course Over Ground) display on the LCD between “True (☐)” or “Magnetic (☒)”.



## SETTING LIST TABLE

### “DSC Setup” Folder

#### Individual Reply:


This parameter selects Individual Reply feature “Automaticall (☒)” or “Manually (☐)”.

#### Individual ACK:

This parameter selects Individual Acknowledge feature “Enable (☒)” or “Unable (☐)”.

#### Individual Ringer:

This parameter selects ringing time of a Individual Call. Available selections are “3 minutes continuously,” “15 times,” “10 times,” and “5 times.”

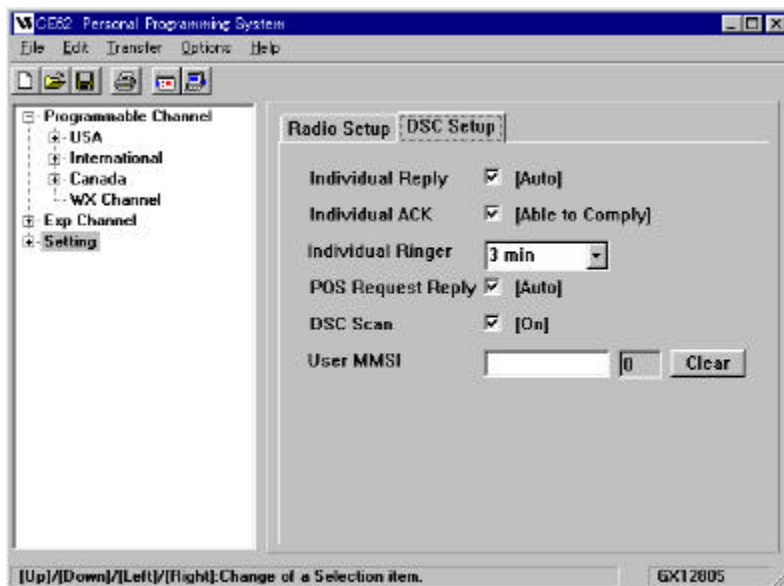

#### POS Request Reply:

This parameter selects Position Request Reply feature “Automaticall (☒)” or “Manually (☐)”.

#### DSC Scan:

This parameter selects the DSC Scan feature “Enabled (☒)” or “Disabled (☐)”.

#### User MMSI:

This parameter sets the nine digits MMSI ID code.

To set the MMSI ID code, click the left mouse button on this parameter to enable programming, then enter the MMSI ID code. Indicates the number of times of the MMSI ID input performing at the right box.

Click the left mouse button on the “Clear” box, to reset the counter, thus enable the MMSI ID input performing.

## SETTING LIST TABLE

### Individual Directory


#### “Individual Directory” Table

##### STATION NAME:

This indicates the station name which is registered into the Individual ID.

##### MMSI:

This indicates the MMIS number which is registered into the Individual ID.

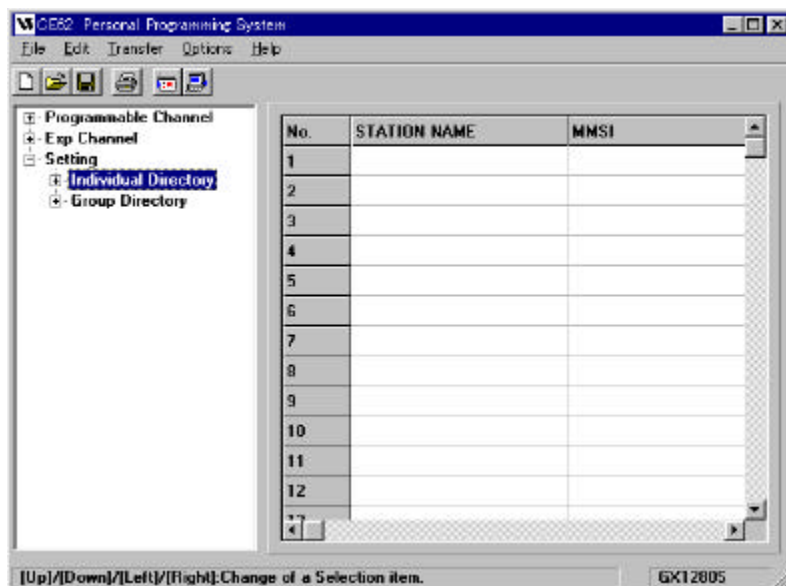

#### “Individual Directory” Window

##### Add/Delete:


These parameters select whether this Individual ID is “Add (☒) to” or “Delete (☐) from” the “Individual Directory” Table.

##### Station Name:

This parameter enter the 12 character Alpha/Numeric “Tag” which is registered into the Individual ID for used identify the channel.

To enter the Alpha/Numeric Tag, click the left mouse button on this parameter to enable programming,

then type the characters of the desired Alpha/Numeric Tag, then press the [Enter] key to save the programmed “Tag.”

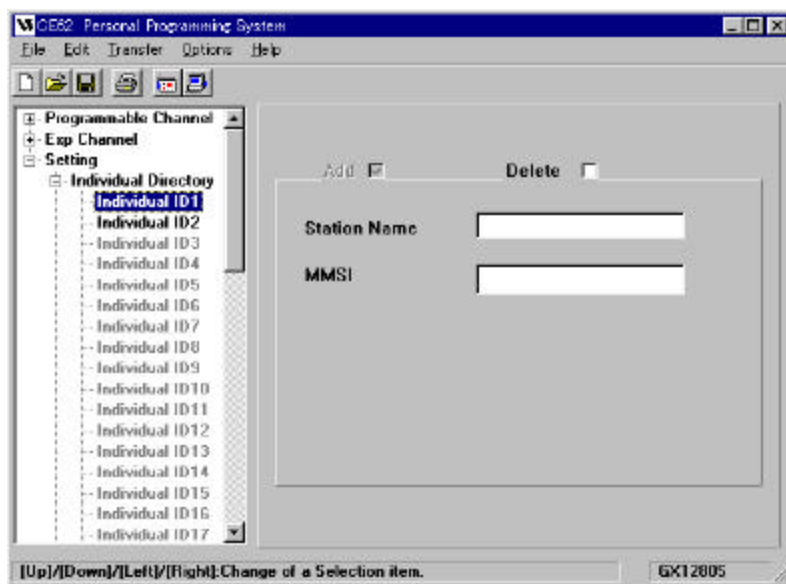

##### MMSI:

This parameter sets the nine digits MMSI ID code which is registered into the Individual ID.

To set the MMSI ID code, click the left mouse button on this parameter to enable programming, then enter the MMSI ID code.

## SETTING LIST TABLE

### Group Directory


#### “Group Directory” Table

##### GROUP NAME:

This indicates the group name which is registered into the Group ID.

##### MMSI:

This indicates the MMIS number which is registered into the Group ID.

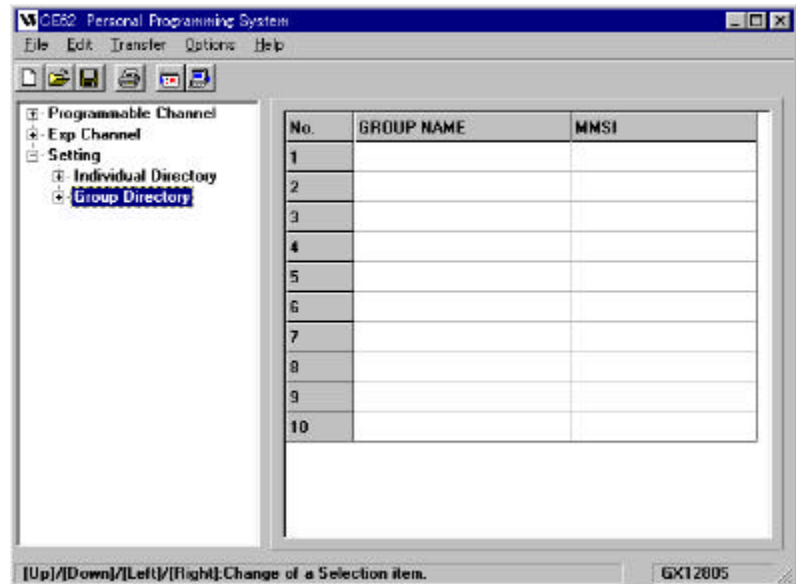

The screenshot shows the 'CE62 Personal Programming System' window. On the left, a tree view shows 'Programmable Channel' expanded, with 'Exp Channel' and 'Setting' sub-items. Under 'Setting', 'Individual Directory' is expanded, and 'Group Directory' is selected. The main area displays a table with 10 rows and 3 columns: 'No.', 'GROUP NAME', and 'MMSI'. The table is currently empty.

| No. | GROUP NAME | MMSI |
|-----|------------|------|
| 1   |            |      |
| 2   |            |      |
| 3   |            |      |
| 4   |            |      |
| 5   |            |      |
| 6   |            |      |
| 7   |            |      |
| 8   |            |      |
| 9   |            |      |
| 10  |            |      |

#### “Group Directory” Window


##### Add/Delete:

These parameters select whether this Group ID is “Add (☒) to” or “Delete (☐) from” the “Group Directory” Table.

##### Station Name:

This parameter enter the 12 character Alpha/Numeric “Tag” which is registered into the Group ID for used identify the group.

To enter the Alpha/Numeric Tag, click the left mouse button on this parameter to enable programming, then type the characters of the desired Alpha/Numeric Tag, then press the [Enter] key to save the programmed “Tag.”

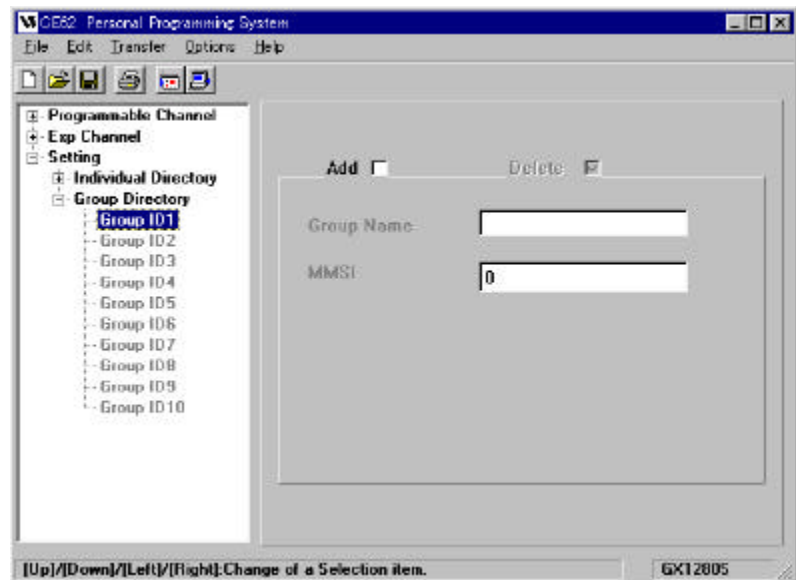

The screenshot shows the 'CE62 Personal Programming System' window. On the left, a tree view shows 'Programmable Channel' expanded, with 'Exp Channel' and 'Setting' sub-items. Under 'Setting', 'Individual Directory' is expanded, and 'Group Directory' is selected. The main area displays a form with two checkboxes: 'Add' (unchecked) and 'Delete' (checked). Below these are two text input fields: 'Group Name' and 'MMSI'. The 'MMSI' field contains the value '0'.

##### MMSI:

This parameter sets the nine digits MMSI ID code which is registered into the Group ID. To set the MMSI ID code, click the left mouse button on this parameter to enable programming, then enter the MMSI ID code.


## TRANSFER MENU

This menu perform the Download or Upload information from/to a radio. To Download/Upload data to/from radio, make the proper connections between the computer and radio and turn on the radio before selecting the “**TRANSFER**” menu.

### “Program to Radio” Item

The “**Program to Radio**” item downloads the programming data from the computer to the radio.


To do this: click the left mouse button on the “**Program to Radio**” item (or the “” icon) to open the pop-up window, then click the left mouse button on the “**OK**” box to download the programming data to the radio.

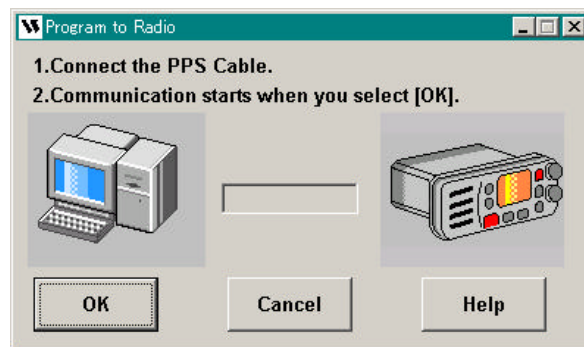

### “Read from Radio” Item

The “**Read from Radio**” item uploads the programming data from the radio to the computer.


To do this: click the left mouse button on the “**Read from Radio**” item (or the “” icon) to open the pop-up window, then click the left mouse button on the “**OK**” box to upload the programming data from the radio to the computer.

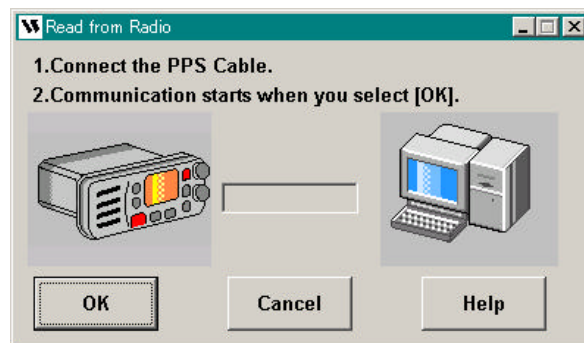


## TRANSFER MENU

### Programming Setup

1. Turn the transceiver off.
2. Connect the computer's serial port and the transceiver's **RAM MIC** connector using the optional **CT-99** Clone Cable and **CT-62** Clone I/F Cable, as shown below.
3. Press and hold in the **[DISTRESS]** and **[SCAN]** keys while turning the transceiver on to enter the programming mode ("UART" icon will appears on the LCD).

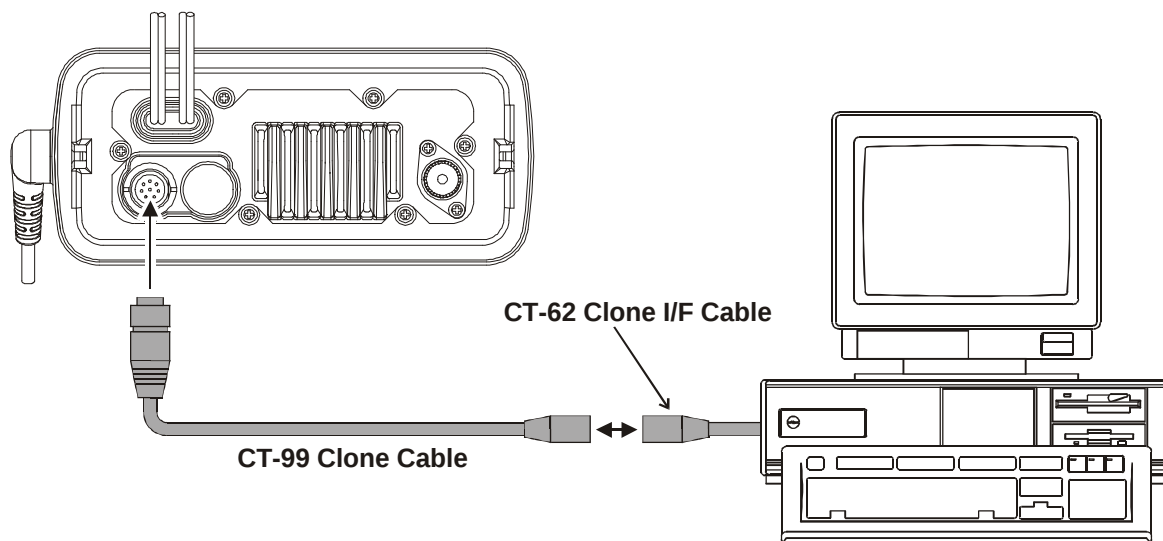

### GX1280S Programming Setup

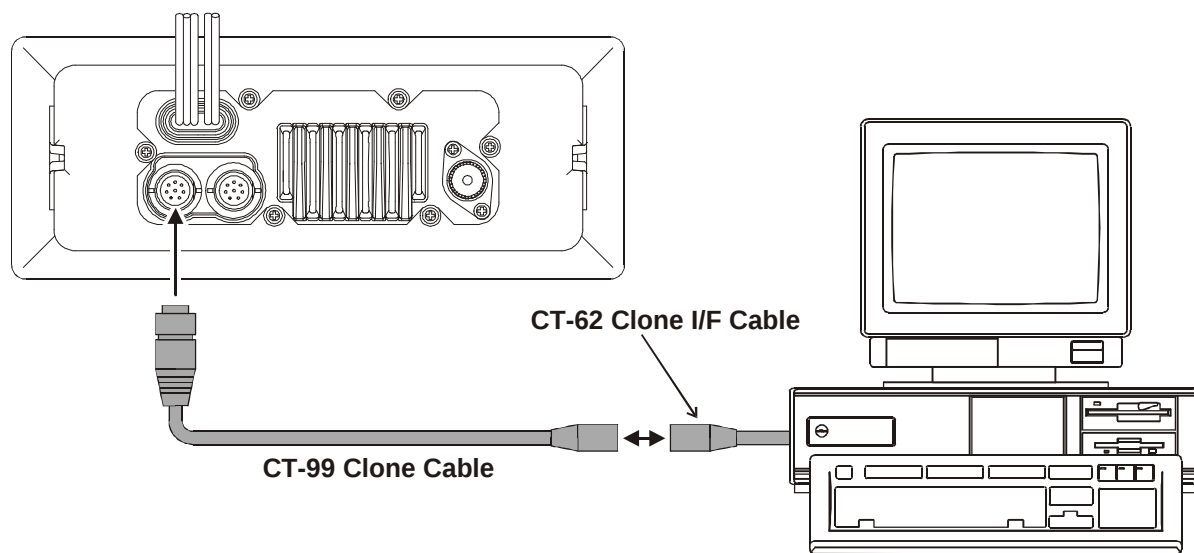


### GX1280S Programming Setup

## OPTION MENU

This menu allows you to set up the program according to your computer's configuration.

### **“Serial Port” Item**

This item selects the communication port to the PC Programming cable which is connected to the radio. Click the left mouse button on the communication port (“**COM1**,” “**COM2**,” “**COM3**,” or “**COM4**”) which is connected to the PC Programming cable which is connected to the radio.

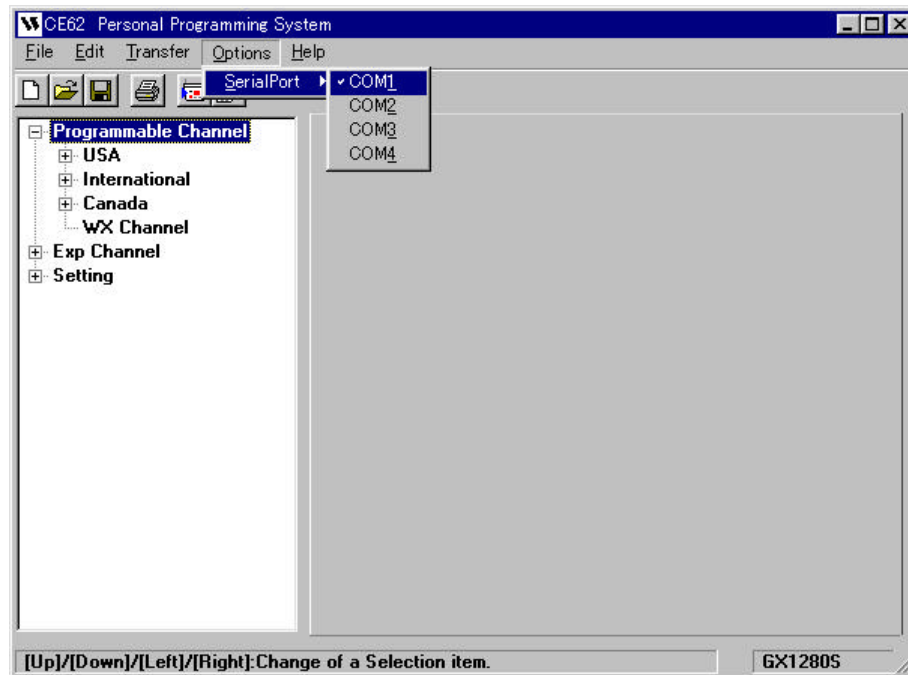

## DEFAULT CHANNEL LIST (USA)

| CH   | TX (MHz) | RX (MHz) | S/D | LO PWR | CHANNEL NAME |
|------|----------|----------|-----|--------|--------------|
| 01 A | 156.050  | 156.050  | S   | —      | VTs          |
| 02   | —        | —        | —   | —      |              |
| 03 A | 156.150  | 156.150  | S   | —      | ----         |
| 04   | —        | —        | —   | —      |              |
| 05 A | 156.250  | 156.250  | S   | —      | VTs          |
| 06   | 156.300  | 156.300  | S   | —      | SAFTY        |
| 07 A | 156.350  | 156.350  | S   | —      | COMMERCIAL   |
| 08   | 156.400  | 156.400  | S   | —      | COMMERCIAL   |
| 09   | 156.450  | 156.450  | S   | —      | CALLING      |
| 10   | 156.500  | 156.500  | S   | —      | COMMERCIAL   |
| 11   | 156.550  | 156.550  | S   | —      | VTs          |
| 12   | 156.600  | 156.600  | S   | —      | VTs          |
| 13   | 156.650  | 156.650  | S   | LO     | BRG/BRG      |
| 14   | 156.700  | 156.700  | S   | —      | VTs          |
| 15   | -        | 156.750  | S   | —      | COMMERCIAL   |
| 16   | 156.800  | 156.800  | S   |        | DISTRESS     |
| 17   | 156.850  | 156.850  | S   | LO     | SAR          |
| 18 A | 156.900  | 156.900  | S   | —      | COMMERCIAL   |
| 19 A | 156.950  | 156.950  | S   | —      | COMMERCIAL   |
| 20   | 157.000  | 161.600  | D   | —      | PORT OPR     |
| 20 A | 157.000  | 157.000  | S   | —      | PORT OPR     |
| 21 A | 157.050  | 157.050  | S   | —      | CCG          |
| 22 A | 157.100  | 157.100  | S   | —      | USCG         |
| 23 A | 157.150  | 157.150  | S   | —      | USCG         |
| 24   | 157.200  | 161.800  | D   | —      | TELEPHONE    |
| 25   | 157.250  | 161.850  | D   | —      | TELEPHONE    |
| 26   | 157.300  | 161.900  | D   | —      | TELEPHONE    |
| 27   | 157.350  | 161.950  | D   | —      | TELEPHONE    |
| 28   | 157.400  | 162.000  | D   | —      | TELEPHONE    |
| 60   | —        | —        | —   | —      |              |
| 61 A | 156.075  | 156.075  | S   | —      | CCG          |
| 62   | —        | —        | —   | —      |              |
| 63 A | 156.175  | 156.175  | S   | —      | VTs          |
| 64 A | 156.225  | 156.225  | S   | —      | COMMERCIAL   |
| 65 A | 156.275  | 156.275  | S   | —      | PORT OPR     |
| 66 A | 156.325  | 156.325  | S   | —      | PORT OPR     |
| 67   | 156.375  | 156.375  | S   | LO     | BRG/BRG      |
| 68   | 156.425  | 156.425  | S   | —      | SHIP-SHIP    |
| 69   | 156.475  | 156.475  | S   | —      | PLEASURE     |
| 70   | —        | 156.525  | S   | —      | DSC          |
| 71   | 156.575  | 156.575  | S   | —      | PLEASURE     |
| 72   | 156.625  | 156.625  | S   | —      | SHIP-SHIP    |
| 73   | 156.675  | 156.675  | S   | —      | PORT OPR     |
| 74   | 156.725  | 156.725  | S   | —      | PORT OPR     |
| 77   | 156.875  | 156.875  | S   | LO     | PORT OPR     |
| 78 A | 156.925  | 156.925  | S   | —      | SHIP-SHIP    |
| 79 A | 156.975  | 156.975  | S   | —      | SHIP-SHIP    |
| 80 A | 157.025  | 157.025  | S   | —      | SHIP-SHIP    |
| 81 A | 157.075  | 157.075  | S   | —      | CCG          |
| 82 A | 157.125  | 157.125  | S   | —      | CCG          |
| 83 A | 157.175  | 157.175  | S   | —      | USCG         |
| 84   | 157.225  | 161.825  | D   | —      | TELEPHONE    |
| 85   | 157.275  | 161.875  | D   | —      | TELEPHONE    |
| 86   | 157.325  | 161.925  | D   | —      | TELEPHONE    |
| 87   | 157.375  | 161.975  | D   | —      | TELEPHONE    |
| 88   | 157.425  | 162.025  | D   | —      | TELEPHONE    |
| 88 A | 157.425  | 157.425  | S   | —      | COMMERCIAL   |

## DEFAULT CHANNEL LIST (INTO)

| CH | TX (MHz) | RX (MHz) | S/D | LO PWR | CHANNEL NAME |
|----|----------|----------|-----|--------|--------------|
| 01 | 156.050  | 160.650  | D   | —      | TELEPHONE    |
| 02 | 156.100  | 160.700  | D   | —      | TELEPHONE    |
| 03 | 156.150  | 160.750  | D   | —      | TELEPHONE    |
| 04 | 156.200  | 160.800  | D   | —      | INTL         |
| 05 | 156.250  | 160.850  | D   | —      | INTL         |
| 06 | 156.300  | 156.300  | S   | —      | SAFTY        |
| 07 | 156.350  | 160.950  | D   | —      | INTL         |
| 08 | 156.400  | 156.400  | S   | —      | COMMERCIAL   |
| 09 | 156.450  | 156.450  | S   | —      | CALLING      |
| 10 | 156.500  | 156.500  | S   | —      | COMMERCIAL   |
| 11 | 156.550  | 156.550  | S   | —      | VTs          |
| 12 | 156.600  | 156.600  | S   | —      | VTs          |
| 13 | 156.650  | 156.650  | S   | —      | BRG/BRG      |
| 14 | 156.700  | 156.700  | S   | —      | VTs          |
| 15 | 156.750  | 156.750  | S   | LO     | COMMERCIAL   |
| 16 | 156.800  | 156.800  | S   | —      | DISTRESS     |
| 17 | 156.850  | 156.850  | S   | LO     | SAR          |
| 18 | 156.900  | 161.500  | D   | —      | INTL         |
| 19 | 156.950  | 161.550  | D   | —      | INTL         |
| 20 | 157.000  | 161.600  | D   | —      | PORT OPR     |
| 21 | 157.050  | 161.650  | D   | —      | INTL         |
| 22 | 157.100  | 161.700  | D   | —      | INTL         |
| 23 | 157.150  | 161.750  | D   | —      | INTL         |
| 24 | 157.200  | 161.800  | D   | —      | TELEPHONE    |
| 25 | 157.250  | 161.850  | D   | —      | TELEPHONE    |
| 26 | 157.300  | 161.900  | D   | —      | TELEPHONE    |
| 27 | 157.350  | 161.950  | D   | —      | TELEPHONE    |
| 28 | 157.400  | 162.000  | D   | —      | TELEPHONE    |
| 60 | 156.025  | 160.625  | D   | —      | TELEPHONE    |
| 61 | 156.075  | 160.675  | D   | —      | INTL         |
| 62 | 156.125  | 160.725  | D   | —      | INTL         |
| 63 | 156.175  | 160.775  | D   | —      | INTL         |
| 64 | 156.225  | 160.825  | D   | —      | TELEPHONE    |
| 65 | 156.275  | 160.875  | D   | —      | INTL         |
| 66 | 156.325  | 160.925  | D   | —      | INTL         |
| 67 | 156.375  | 156.375  | S   | —      | BRG/BRG      |
| 68 | 156.425  | 156.425  | S   | —      | SHIP-SHIP    |
| 69 | 156.475  | 156.475  | S   | —      | PLEASURE     |
| 70 | —        | 156.525  | S   | —      | DSC          |
| 71 | 156.575  | 156.575  | S   | —      | PLEASURE     |
| 72 | 156.625  | 156.625  | S   | —      | SHIP-SHIP    |
| 73 | 156.675  | 156.675  | S   | —      | PORT OPR     |
| 74 | 156.725  | 156.725  | S   | —      | PORT OPR     |
| 77 | 156.875  | 156.875  | S   | —      | PORT OPR     |
| 78 | 156.925  | 161.525  | D   | —      | INTL         |
| 79 | 156.975  | 161.575  | D   | —      | INTL         |
| 80 | 157.025  | 161.625  | D   | —      | INTL         |
| 81 | 157.075  | 161.675  | D   | —      | INTL         |
| 82 | 157.125  | 161.725  | D   | —      | INTL         |
| 83 | 157.175  | 161.775  | D   | —      | INTL         |
| 84 | 157.225  | 161.825  | D   | —      | TELEPHONE    |
| 85 | 157.275  | 161.875  | D   | —      | TELEPHONE    |
| 86 | 157.325  | 161.925  | D   | —      | TELEPHONE    |
| 87 | 157.375  | 161.975  | D   | —      | TELEPHONE    |
| 88 | 157.425  | 162.025  | D   | —      | TELEPHONE    |

## DEFAULT CHANNEL LIST (CANADA)

| CH   | TX (MHz) | RX (MHz) | S/D | LO PWR | CHANNEL NAME |
|------|----------|----------|-----|--------|--------------|
| 01   | 156.050  | 160.650  | D   | —      | TELEPHONE    |
| 02   | 156.100  | 160.700  | D   | —      | TELEPHONE    |
| 03   | 156.150  | 160.750  | D   | —      | TELEPHONE    |
| 04 A | 156.200  | 156.200  | S   | —      | CCG          |
| 05 A | 156.250  | 156.250  | S   | —      | VTS          |
| 06   | 156.300  | 156.300  | S   | —      | SAFTY        |
| 07 A | 156.350  | 156.350  | S   | —      | COMMERCIAL   |
| 08   | 156.400  | 156.400  | S   | —      | COMMERCIAL   |
| 09   | 156.450  | 156.450  | S   | —      | CALLING      |
| 10   | 156.500  | 156.500  | S   | —      | COMMERCIAL   |
| 11   | 156.550  | 156.550  | S   | —      | VTS          |
| 12   | 156.600  | 156.600  | S   | —      | VTS          |
| 13   | 156.650  | 156.650  | S   | LO     | BRG/BRG      |
| 14   | 156.700  | 156.700  | S   | —      | VTS          |
| 15   | 156.750  | 156.750  | S   | LO     | COMMERCIAL   |
| 16   | 156.800  | 156.800  | S   | —      | DISTRESS     |
| 17   | 156.850  | 156.850  | S   | LO     | SAR          |
| 18 A | 156.900  | 156.900  | S   | —      | COMMERCIAL   |
| 19 A | 156.950  | 156.950  | S   | —      | COMMERCIAL   |
| 20   | 157.000  | 161.600  | D   | LO     | PORT OPR     |
| 21 A | 157.050  | 157.050  | S   | —      | CCG          |
| 22 A | 157.100  | 157.100  | S   | —      | USCG         |
| 23   | 157.150  | 161.750  | D   | —      | INTL         |
| 24   | 157.200  | 161.800  | D   | —      | TELEPHONE    |
| 25   | 157.250  | 161.850  | D   | —      | TELEPHONE    |
| 26   | 157.300  | 161.900  | D   | —      | TELEPHONE    |
| 27   | 157.350  | 161.950  | D   | —      | TELEPHONE    |
| 28   | 157.400  | 162.000  | D   | —      | TELEPHONE    |
| 60   | 156.025  | 160.625  | D   | —      | TELEPHONE    |
| 61 A | 156.075  | 156.075  | S   | —      | CCG          |
| 62 A | 156.125  | 156.125  | S   | —      | CCG          |
| 63   | —        | —        | —   | —      |              |
| 64   | 156.225  | 160.825  | D   | —      | TELEPHONE    |
| 64 A | 156.225  | 156.225  | S   | —      | COMMERCIAL   |
| 65 A | 156.275  | 156.275  | S   | —      | PORT OPR     |
| 66 A | 156.325  | 156.325  | S   | LO     | PORT OPR     |
| 67   | 156.375  | 156.375  | S   | —      | BRG/BRG      |
| 68   | 156.425  | 156.425  | S   | —      | SHIP-SHIP    |
| 69   | 156.475  | 156.475  | S   | —      | PLEASURE     |
| 70   | —        | 156.525  | S   | —      | DSC          |
| 71   | 156.575  | 156.575  | S   | —      | PLEASURE     |
| 72   | 156.625  | 156.625  | S   | —      | SHIP-SHIP    |
| 73   | 156.675  | 156.675  | S   | —      | PORT OPR     |
| 74   | 156.725  | 156.725  | S   | —      | PORT OPR     |
| 77   | 156.875  | 156.875  | S   | LO     | PORT OPR     |
| 78 A | 156.925  | 156.925  | S   | —      | SHIP-SHIP    |
| 79 A | 156.975  | 156.975  | S   | —      | SHIP-SHIP    |
| 80 A | 157.025  | 157.025  | S   | —      | SHIP-SHIP    |
| 81 A | 157.075  | 157.075  | S   | —      | CCG          |
| 82 A | 157.125  | 157.125  | S   | —      | CCG          |
| 83   | 157.175  | 161.775  | D   | -      | CCG          |
| 83 A | 157.175  | 157.175  | S   | -      | CCG          |
| 84   | 157.225  | 161.825  | D   | -      | TELEPHONE    |
| 85   | 157.275  | 161.875  | D   | -      | TELEPHONE    |
| 86   | 157.325  | 161.925  | D   | -      | TELEPHONE    |
| 87   | 157.375  | 161.975  | D   | -      | TELEPHONE    |
| 88   | 157.425  | 162.025  | D   | -      | TELEPHONE    |

**DEFAULT CHANNEL LIST (WEATHER CHANNEL)**

| CH   | FREQUENCY   | ENABLE/DISABLE | SCAN    | CHANNEL NAME |
|------|-------------|----------------|---------|--------------|
| WX01 | 162.550 MHz | Enable         | Disable | 162.550MHz   |
| WX02 | 162.400 MHz | Enable         | Disable | 162.400MHz   |
| WX03 | 162.475 MHz | Enable         | Disable | 162.475MHz   |
| WX04 | 162.425 MHz | Enable         | Disable | 162.425MHz   |
| WX05 | 162.450 MHz | Enable         | Disable | 162.450MHz   |
| WX06 | 162.450 MHz | Enable         | Disable | 162.450MHz   |
| WX07 | 162.525 MHz | Enable         | Disable | 162.525MHz   |
| WX08 | 161.650 MHz | Enable         | Disable | 161.650MHz   |
| WX09 | 161.775 MHz | Enable         | Disable | 161.775MHz   |
| WX10 | 163.275 MHz | Enable         | Disable | 163.275MHz   |

**EXPANSION CHANNEL FREQUENCY LIST**

| Position | RX (MHz) | TX (MHz) | Position | RX (MHz) | TX (MHz) | Position | RX (MHz) | TX (MHz) |
|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| 0        | 160.600  | 156.000  | 46       | 162.900  | 158.300  | 92       | 162.225  | 157.625  |
| 1        | 160.650  | 156.050  | 47       | 162.950  | 158.350  | 93       | 162.275  | 157.675  |
| 2        | 160.700  | 156.100  | 48       | 163.000  | 158.400  | 94       | 162.325  | 157.725  |
| 3        | 160.750  | 156.150  | 49       | 163.050  | 158.450  | 95       | 162.375  | 157.775  |
| 4        | 160.800  | 156.200  | 50       | 163.100  | 158.500  | 96       | 162.425  | 157.825  |
| 5        | 160.850  | 156.250  | 51       | 163.150  | 158.550  | 97       | 162.475  | 157.875  |
| 6        | 160.900  | 156.300  | 52       | 163.200  | 158.600  | 98       | 162.525  | 157.925  |
| 7        | 160.950  | 156.350  | 53       | 163.250  | 158.650  | 99       | 162.575  | 157.975  |
| 8        | 161.000  | 156.400  | 54       | 163.300  | 158.700  | 100      | 162.625  | 158.025  |
| 9        | 161.050  | 156.450  | 55       | 163.350  | 158.750  | 101      | 162.675  | 158.075  |
| 10       | 161.100  | 156.500  | 56       | 163.400  | 158.800  | 102      | 162.725  | 158.125  |
| 11       | 161.150  | 156.550  | 57       | 163.450  | 158.850  | 103      | 162.775  | 158.175  |
| 12       | 161.200  | 156.600  | 58       | 163.500  | 158.900  | 104      | 162.825  | 158.225  |
| 13       | 161.250  | 156.650  | 59       | 163.550  | 158.950  | 105      | 162.875  | 158.275  |
| 14       | 161.300  | 156.700  | 60       | 160.625  | 156.025  | 106      | 162.925  | 158.325  |
| 15       | 161.350  | 156.750  | 61       | 160.675  | 156.075  | 107      | 162.975  | 158.375  |
| 16       | 161.400  | 156.800  | 62       | 160.725  | 156.125  | 108      | 163.025  | 158.425  |
| 17       | 161.450  | 156.850  | 63       | 160.775  | 156.175  | 109      | 163.075  | 158.475  |
| 18       | 161.500  | 156.900  | 64       | 160.825  | 156.225  | 110      | 163.125  | 158.525  |
| 19       | 161.550  | 156.950  | 65       | 160.875  | 156.275  | 111      | 163.175  | 158.575  |
| 20       | 161.600  | 157.000  | 66       | 160.925  | 156.325  | 112      | 163.225  | 158.625  |
| 21       | 161.650  | 157.050  | 67       | 160.975  | 156.375  | 113      | 163.275  | 158.675  |
| 22       | 161.700  | 157.100  | 68       | 161.025  | 156.425  | 114      | 163.325  | 158.725  |
| 23       | 161.750  | 157.150  | 69       | 161.075  | 156.475  | 115      | 163.375  | 158.775  |
| 24       | 161.800  | 157.200  | 70       | 156.525  | -----    | 116      | 163.425  | 158.825  |
| 25       | 161.850  | 157.250  | 71       | 161.175  | 156.575  | 117      | 163.475  | 158.875  |
| 26       | 161.900  | 157.300  | 72       | 161.225  | 156.625  | 118      | 163.525  | 158.925  |
| 27       | 161.950  | 157.350  | 73       | 161.275  | 156.675  | 119      | 163.575  | 158.975  |
| 28       | 162.000  | 157.400  | 74       | 161.325  | 156.725  | 120      | 163.600  | 159.000  |
| 29       | 162.050  | 157.450  | 75       | 161.375  | 156.775  | 121      | 163.625  | 159.025  |
| 30       | 162.100  | 157.500  | 76       | 161.425  | 156.825  | 122      | 163.650  | 159.050  |
| 31       | 162.150  | 157.550  | 77       | 161.475  | 156.875  | 123      | 163.675  | 159.075  |
| 32       | 162.200  | 157.600  | 78       | 161.525  | 156.925  | 124      | 163.700  | 159.100  |
| 33       | 162.250  | 157.650  | 79       | 161.575  | 156.975  | 125      | 163.725  | 159.125  |
| 34       | 162.300  | 157.700  | 80       | 161.625  | 157.025  | 126      | 163.750  | 159.150  |
| 35       | 162.350  | 157.750  | 81       | 161.675  | 157.075  | 127      | 163.775  | 159.175  |
| 36       | 162.400  | 157.800  | 82       | 161.725  | 157.125  | 128      | 163.800  | 159.200  |
| 37       | 162.450  | 157.850  | 83       | 161.775  | 157.175  | 129      | 163.825  | 159.225  |
| 38       | 162.500  | 157.900  | 84       | 161.825  | 157.225  | 130      | 163.850  | 159.250  |
| 39       | 162.550  | 157.950  | 85       | 161.875  | 157.275  | 131      | 163.875  | 159.275  |
| 40       | 162.600  | 158.000  | 86       | 161.925  | 157.325  | 132      | 163.900  | 159.300  |
| 41       | 162.650  | 158.050  | 87       | 161.975  | 157.375  | 133      | 163.925  | 159.325  |
| 42       | 162.700  | 158.100  | 88       | 162.025  | 157.425  | 134      | 163.950  | 159.350  |
| 43       | 162.750  | 158.150  | 89       | 162.075  | 157.475  | 135      | 163.975  | 159.375  |
| 44       | 162.800  | 158.200  | 90       | 162.125  | 157.525  | 136      | 164.000  | 159.400  |
| 45       | 162.850  | 158.250  | 91       | 162.175  | 157.575  | 137      | 164.025  | 159.425  |

## EXPANSION CHANNEL FREQUENCY LIST

| Position | RX (MHz) | TX (MHz) | Position | RX (MHz) | TX (MHz) | Position | RX (MHz) | TX (MHz) |
|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| 138      | 164.050  | 159.450  | 184      | 165.200  | 160.600  | 230      | 166.350  | 161.750  |
| 139      | 164.075  | 159.475  | 185      | 165.225  | 160.625  | 231      | 166.375  | 161.775  |
| 140      | 164.100  | 159.500  | 186      | 165.250  | 160.650  | 232      | 166.400  | 161.800  |
| 141      | 164.125  | 159.525  | 187      | 165.275  | 160.675  | 233      | 166.425  | 161.825  |
| 142      | 164.150  | 159.550  | 188      | 165.300  | 160.700  | 234      | 166.450  | 161.850  |
| 143      | 164.175  | 159.575  | 189      | 165.325  | 160.725  | 235      | 166.475  | 161.875  |
| 144      | 164.200  | 159.600  | 190      | 165.350  | 160.750  | 236      | 166.500  | 161.900  |
| 145      | 164.225  | 159.625  | 191      | 165.375  | 160.775  | 237      | 166.525  | 161.925  |
| 146      | 164.250  | 159.650  | 192      | 165.400  | 160.800  | 238      | 166.550  | 161.950  |
| 147      | 164.275  | 159.675  | 193      | 165.425  | 160.825  | 239      | 166.575  | 161.975  |
| 148      | 164.300  | 159.700  | 194      | 165.450  | 160.850  | 240      | 166.600  | 162.000  |
| 149      | 164.325  | 159.725  | 195      | 165.475  | 160.875  | 241      | 166.625  | 162.025  |
| 150      | 164.350  | 159.750  | 196      | 165.500  | 160.900  | 242      | 160.575  | 155.975  |
| 151      | 164.375  | 159.775  | 197      | 165.525  | 160.925  | 243      | 160.550  | 155.950  |
| 152      | 164.400  | 159.800  | 198      | 165.550  | 160.950  | 244      | 160.525  | 155.925  |
| 153      | 164.425  | 159.825  | 199      | 165.575  | 160.975  | 245      | 160.500  | 155.900  |
| 154      | 164.450  | 159.850  | 200      | 165.600  | 161.000  | 246      | 160.475  | 155.875  |
| 155      | 164.475  | 159.875  | 201      | 165.625  | 161.025  | 247      | 160.450  | 155.850  |
| 156      | 164.500  | 159.900  | 202      | 165.650  | 161.050  | 248      | 160.425  | 155.825  |
| 157      | 164.525  | 159.925  | 203      | 165.675  | 161.075  | 249      | 160.400  | 155.800  |
| 158      | 164.550  | 159.950  | 204      | 165.700  | 161.100  | 250      | 160.375  | 155.775  |
| 159      | 164.575  | 159.975  | 205      | 165.725  | 161.125  | 251      | 160.350  | 155.750  |
| 160      | 164.600  | 160.000  | 206      | 165.750  | 161.150  | 252      | 160.325  | 155.725  |
| 161      | 164.625  | 160.025  | 207      | 165.775  | 161.175  | 253      | 160.300  | 155.700  |
| 162      | 164.650  | 160.050  | 208      | 165.800  | 161.200  | 254      | 160.275  | 155.675  |
| 163      | 164.675  | 160.075  | 209      | 165.825  | 161.225  | 255      | 160.250  | 155.650  |
| 164      | 164.700  | 160.100  | 210      | 165.850  | 161.250  | 256      | 160.225  | 155.625  |
| 165      | 164.725  | 160.125  | 211      | 165.875  | 161.275  | 257      | 160.200  | 155.600  |
| 166      | 164.750  | 160.150  | 212      | 165.900  | 161.300  | 258      | 160.175  | 155.575  |
| 167      | 164.775  | 160.175  | 213      | 165.925  | 161.325  | 259      | 160.150  | 155.550  |
| 168      | 164.800  | 160.200  | 214      | 165.950  | 161.350  | 260      | 160.125  | 155.525  |
| 169      | 164.825  | 160.225  | 215      | 165.975  | 161.375  | 261      | 160.100  | 155.500  |
| 170      | 164.850  | 160.250  | 216      | 166.000  | 161.400  | 262      | 160.075  | 155.475  |
| 171      | 164.875  | 160.275  | 217      | 166.025  | 161.425  | 263      | 160.050  | 155.450  |
| 172      | 164.900  | 160.300  | 218      | 166.050  | 161.450  | 264      | 160.025  | 155.425  |
| 173      | 164.925  | 160.325  | 219      | 166.075  | 161.475  | 265      | 160.000  | 155.400  |
| 174      | 164.950  | 160.350  | 220      | 166.100  | 161.500  | 266      | 159.975  | 155.375  |
| 175      | 164.975  | 160.375  | 221      | 166.125  | 161.525  | 267      | 159.950  | 155.350  |
| 176      | 165.000  | 160.400  | 222      | 166.150  | 161.550  | 268      | 159.925  | 155.325  |
| 177      | 165.025  | 160.425  | 223      | 166.175  | 161.575  | 269      | 159.900  | 155.300  |
| 178      | 165.050  | 160.450  | 224      | 166.200  | 161.600  | 270      | 159.875  | 155.275  |
| 179      | 165.075  | 160.475  | 225      | 166.225  | 161.625  | 271      | 159.850  | 155.250  |
| 180      | 165.100  | 160.500  | 226      | 166.250  | 161.650  | 272      | 159.825  | 155.225  |
| 181      | 165.125  | 160.525  | 227      | 166.275  | 161.675  | 273      | 159.800  | 155.200  |
| 182      | 165.150  | 160.550  | 228      | 166.300  | 161.700  | 274      | 159.775  | 155.175  |
| 183      | 165.175  | 160.575  | 229      | 166.325  | 161.725  | 275      | 159.750  | 155.150  |

---

**EXPANSION CHANNEL FREQUENCY LIST**

---

| Position | RX (MHz) | TX (MHz) |
|----------|----------|----------|
| 276      | 159.725  | 155.125  |
| 277      | 159.700  | 155.100  |
| 278      | 159.675  | 155.075  |
| 279      | 159.650  | 155.050  |
| 280      | 159.625  | 155.025  |
| 281      | 159.600  | 155.000  |

**NOTE**

---

---

